

DKM FX Chassis

Step 2: Select your chassis depending on the number of endpoints you have.

| PORTS | NUMBER OF I/O BOARDS SUPPORTED (NOT INCLUDED) 8 PORTS PER CARD | POWER SUPPLY BOARDS SUPPORTED | NUMBER OF FAN TRAYS SUPPORTED | PRODUCT CODE |
|-------|----------------------------------------------------------------|----------------------------------------------|-------------------------------|-------------------------|
| 576 | 72 | 3 (2 included) (ACX288-PS) | 2 | ACX576* |
| 288 | 36 | 3 (2 included) (ACX288-PS) | 2 | ACX288* |
| 160 | 20 | 3 (2 included) (ACX160-PS) | 2 | ACX160 |
| 80 | 10 | 2 (1 included) (ACX080-PS) | 2 | ACX080 |
| 48 | 6 | 2 (1 included) (ACX080-PS) | 2 | ACX048 |

*Does not support the ACX108-6G I/O boards unless you're switching amongst the local 8-ports on the same I/O card.

| SPARE/REDUNDANT CPU BOARDS | CONNECTORS | SKU |
|-----------------------------------------------------------------|-----------------------------------------------------------|------------|
| DKM FX Controller Card (included with all chassis listed above) | (1) DVI-D single-link, (2) USB Type A, (1) DB9, (1) RJ-45 | ACX288-CTL |

Accessories for DKM chassis.

| ACCESSORIES | PRODUCT CODE |
|------------------------------------------|----------------------------|
| Spare filter for ACX048 | ACX048-FIL |
| Spare filter for ACX080 | ACX080-FIL |
| Spare filter for ACX160 or ACX288 | ACX288-FIL |
| Spare power supply for ACX048 and ACX080 | ACX080-PS |
| Spare power supply for ACX160 | ACX160-PS |
| Spare power supply for ACX288 | ACX288-PS |
| Tray for 48-/80-port console | ACX080-FAN |
| Tray for 160-/288-port console | ACX288-FAN |

